



1 Ensure surfaces are clean, dry and dust free.


2 Put on goggles and gloves provided.

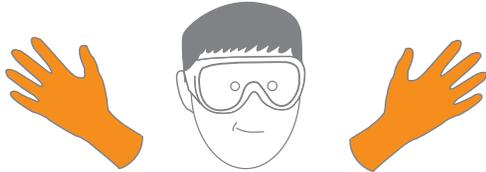


3 Cut matting to shape of repair using scissors provided, ensuring there is at least a 50mm (2in) overlap on all sides. Set aside for later use.

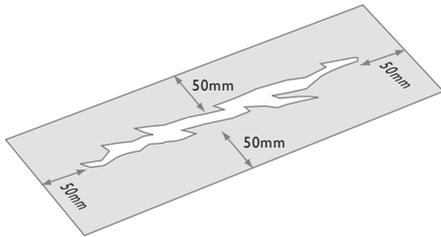


4 Carefully open resin pot and stir in catalyst powder with stirring stick provided.

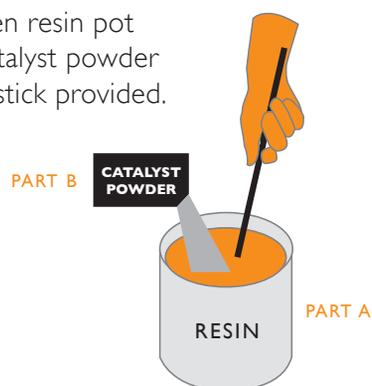


5 Time to work quickly - liberally apply pre-mixed resin to repair area making ready to receive matting. You have approximately 15 minutes total working time.

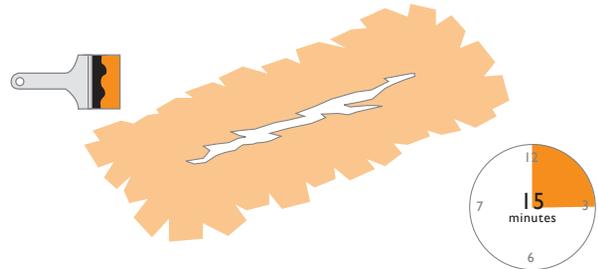

6 Whilst resin is still wet apply matting over wetted in area and then brush more pre-mixed resin over matting, ensuring you cover all the matting.

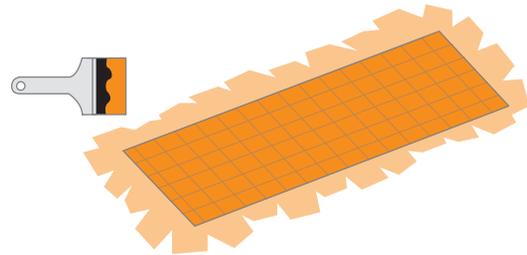

7 Once any remaining mixed resin has completely hardened it can be disposed of as domestic waste.

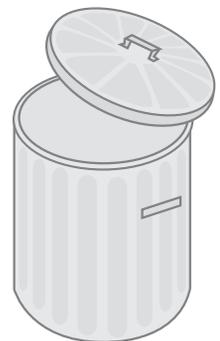

MATERIAL SAFETY DATASHEET DOWNLOADABLE @ REP-KIT.CO.UK
OR CONTACT US FOR A COPY




Selekta UK Interior Exterior Ltd

Systems House, Horndon Industrial Park, West Horndon, Brentwood, Essex CM13 3XL


Tel 01277 810 910 Fax 01277 810 510 www.rep-kit.co.uk

1 Ensure surfaces are clean, dry and dust free.


2 Put on goggles and gloves provided.

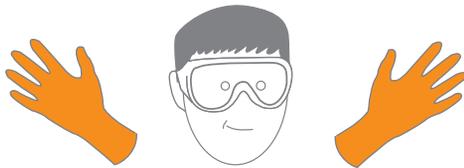


3 Cut matting to the circumference of the pipe + 50mm.

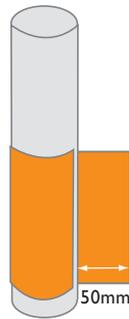


4 Make a series of cuts approximately 25mm wide by 75mm long along the length of the matting.

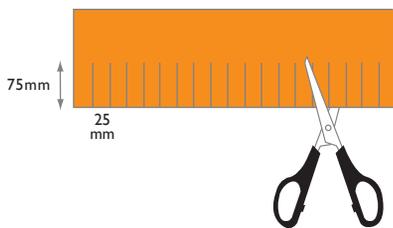


5 Cut another piece of matting with a rough semi-circle slightly smaller than the pipe circumference cut out. Repeat this for the other side.

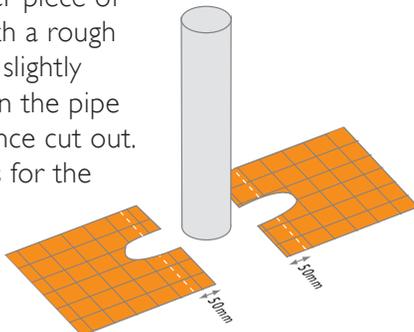


6 Carefully open resin pot and stir in catalyst powder with stirring stick provided.

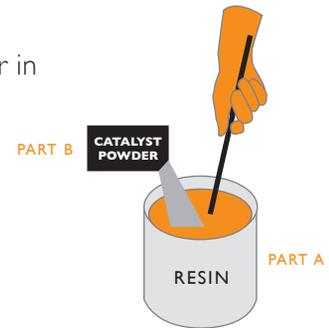


7 Time to work quickly - first liberally apply pre-mixed resin around pipe and to repair area making ready to receive matting. You have approximately 15 minutes total working time.

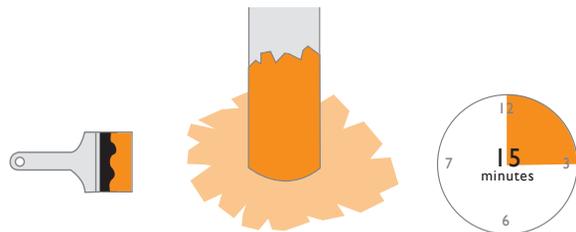

8 Whilst resin is still wet apply matting over wetted in area, leaving the 25mm cuts to lay on the roof surface and then brush more resin over matting, ensuring you cover all the matting.

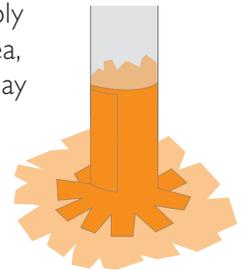

9 Now place one of the pieces of matting over the fanned out matting on the roof deck and paint over with resin. Repeat for other side.

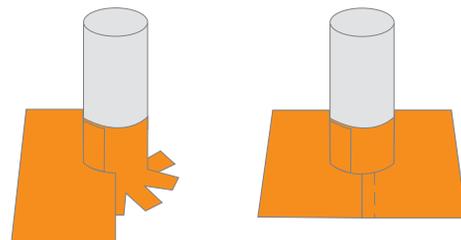

Seleкта UK Interior Exterior Ltd

Systems House, Horndon Industrial Park, West Horndon, Brentwood, Essex CM13 3XL

Tel 01277 810 910 Fax 01277 810 510 www.rep-kit.co.uk